

MEKO

Mechanical Keyboard

User Manual


BLiNK

Welcome to your meko Blink.

Please charge before first use.

Need more help?

mekokeyboards.com

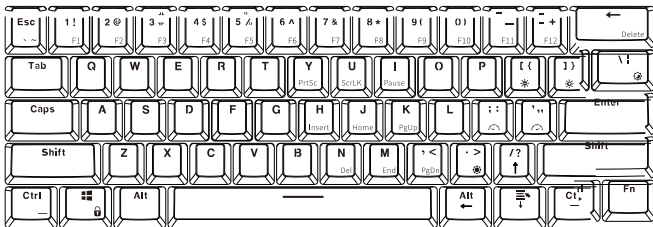

Dimensions 289 x 103 x 39mm

Keycaps 61 ABS Double Shot

Backlighting SMD RGB LED

USB Type C

Hotswap Yes

Wireless / BT Yes

Supported Systems

Windows XP - 10

Mac OS

Linux

iOS / Android

Backlight Settings

**Fn + ** cycle through 17 backlight effects

Fn + . cycle backlight colors (RGB version only)

Fn + [increase backlight brightness

Fn +] decrease backlight brightness

Fn + ; decrease backlight speed

Fn + ' increase backlight speed

Special key functions



Fn + A switch to Windows OS mode

Fn + S switch to Mac OS mode

Fn + Esc	~	Fn + 6	F6	Fn + =	F12	Fn + j	Home
Fn + 1	F1	Fn + 7	F7	Fn + backspace	Del	Fn + k	PgUp
Fn + 2	F2	Fn + 8	F8	Fn + y	Prtsc	Fn + n	Del
Fn + 3	F3	Fn + 9	F9	Fn + u	ScrLk	Fn + m	End
Fn + 4	F4	Fn + 0	F10	Fn + i	Pause	Fn + ,	PgDn
Fn + 5	F5	Fn + -	F11	Fn + h	Ins		

Example



Fn + Enter turn on/off arrow key function

Fn +  lock/unlock windows key

Multimedia functions for Mac

Mac OS only. F1 - F12 must be first function. See **Function Locking**



Function Locking

Fn + Ctrl (left) (1st time) activate secondary function of combination keys (excludes arrow keys).

Fn + Ctrl (left) (2nd time) return **y/u/i/h/j/k/n/m/**, to primary function.

Fn + Ctrl (left) (3rd time) return all keys to primary function.

Bluetooth / USB

To use in wired mode

Set switch on the bottom of Blink to **OFF** position & connect the USB cable.

To use in wireless mode

Set switch on the bottom of Blink to **ON** position & disconnect the USB cable. Remember to pair your Blink before normal wireless use.

Your Blink can store up to 3 Bluetooth devices at a time.

Switch BT Device quickly press FN + Q / W / E

Pair BT Device hold FN + Q / W / E

Connecting Bluetooth devices

- 1) Make sure switch on the bottom of keyboard is set to **ON**.
- 2) Press and hold FN + your choice of Q, W, or E for 3 seconds. The key you selected will flicker continuously signalling it has entered pairing mode.
- 3) Open your device's BT search mode to connect the device.
- 4) The key will stop flickering upon a successful connection.

Charging

- 1) The space bar will flash 3 times when plugged first plugged in.
- 2) When the space bar flashes 5 times continuously, the battery is full.
- 3) If there is no operation for 3 minutes, your Blink will turn off automatically to save power. Press any key to wake it up.